

## Description

The Holjeron BusBlock Frequency Input Module is designed to handle frequency inputs in a limited amount of space. The BusBlock Frequency Input Module has four channels, with each channel using bus power. Each input can be either a separate SDS address, or can be configured to be four embedded objects within a single SDS address. Field terminations are captive screw terminals.

Other BusBlock products include an eight point configurable digital module; as well as analog input and output modules.



## Warranty/Remedy

Seller warrants its products to be free from defects in design, material and workmanship under normal use and service. Seller will repair or replace without charge any such products it finds to be so defective on its return to Seller within 18 months after date of shipment by Seller. **The foregoing is in lieu of all other expressed or implied warranties (except title), including those of merchantability and fitness for a particular purpose.** The foregoing is also purchaser's sole remedy and is in lieu of all other guarantees, obligations, or liabilities or any consequences incidental, or punitive damages attributable to negligence or strict liability, all by way of example.



While Holjeron provides application assistance, personally and through our literature, it is up to the customer to determine the suitability of the product in the application.

All information contained herein, including illustrations, specifications and dimensions, is believed to be reliable as of the date of publication, but is subject to change without notice.


## Specifications

<b>Part Number</b>	4 Channel Frequency Input Module	BBK-FRQ204		
<b>Electrical</b>	SDS Voltage Range	11-25 VDC		
	Current Consumption	25 mA @24VDC		
	Data Rates	125, 250, 500 and 1000 kbps		
<b>Inputs</b>	Type	Quadrature Encoder or Magnetic		
	Number	Four (4)		
	Maximum Frequency	30 KHz		
	Voltage	5-30 VDC		
	Maximum Current	20 mA per input		
<b>Environmental</b>	Temperature	Storage	-40° to 85° C (-40° to 185° F)	
		Operating	-25° to 70° C (-13° to 158° F)	
	Humidity		5-95% RH, non-condensing	
	Vibration		2G at 10 to 500 Hz	
	Shock		10G	
<b>Physical</b>	Dimensions	2.95" H x 2.17" W x 4.33" D		
	Weight	8 oz		
	Color	Bone Gray		
	Case Material	Polycarbonate		
	Mounting	DIN Rail or foot mount		
	Terminations	Cage Clamp Screw Terminal		
	Indication (details on page 4)	Power	Red-Green LED	
		Activity	Red-Green LED	
Error		Red-Green LED		
<b>Certifications</b>	CSA	C22.2 N0. 14-10		
	UL	508 (17 <sup>th</sup> Edition)		

**Dimensions**

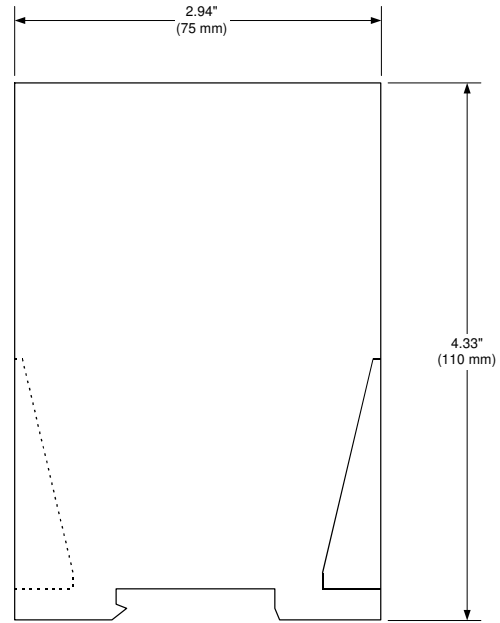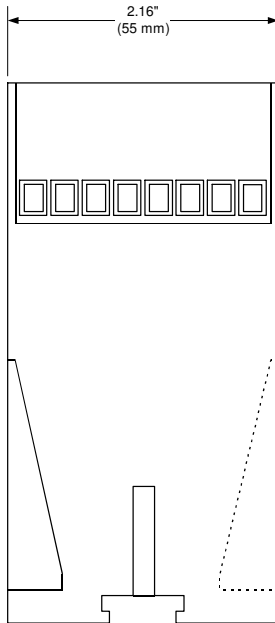

**Wiring**

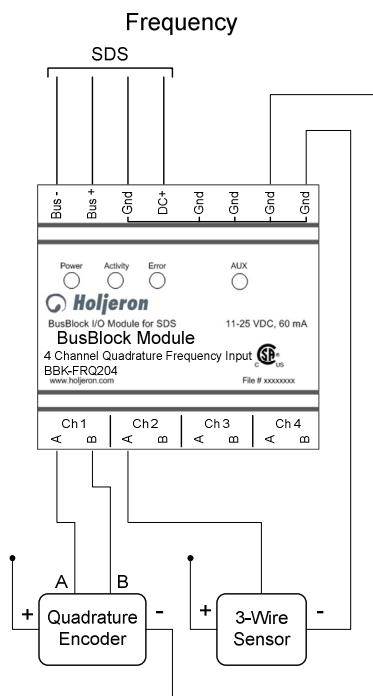

## Configuration Tools

### Holjeron ZTC-F64 Multi-Config Tool (ZTC-F64-DOTS)

Holjeron offers a configuration tool that connects to the USB port of a personal computer and 24V power, either from the Bus or a dedicated power supply. This tool can be used to configure or master an SDS Network, a ViaBus network, or Holjeron's Zonelink.S serial communication for multi-zone MDR Controls.

### Legacy Configuration Tools:

These tools below (and others) can be used for configuration, but are no longer sold or supported:

### Holjeron HSIM Portable Configuration Tool for SDS (HSM-PTB101)

### Honeywell hand-held activator

Honeywell Think & Do Software using Holjeron's PCI Interface Card to communicate with a PC.

## Quick Start

*The following steps are the minimum steps to configure BusBlock module. Default values are shown in bold.*

### Baud Rate

Baud rate selections are as follows:

**0 = Autobaud**

1 = 1000 kbps

2 = 500 kbps

3 = 250 kbps

4 = 125 kbps

### Set Device Address

Using one of the tools described above, change the device address from the default. All units are shipped from the factory as **address 123-126**.

### Note

*Set the address before attaching any component to a complete bus. This will help prevent duplicate addresses on a bus.*

## Channel Configuration

If using less than four channels, set the **Number of Channels (attribute 58)** to the appropriate value. Legal entries are 1, 2, 3 and 4.

Each channel can also be configured as an embedded object within a single SDS address. This requires an SDS master that understands how to communicate with embedded objects.

**Enable Objects (attribute 59)**, when set to a value of 1, each channel is configured as an embedded object within a single SDS address.

### Note

*Changes to attributes 58 or 59 require power to be cycled to the module before changes take effect.*

## Tag Name

**Tag Name (attribute 56)** is a 32-character string that the user can enter to describe the functionality and/or location of each channel of the BusBlock Frequency Input Module.

## LED Diagnostic Indicator Patterns

Current (Third) Generation (Rev 6+)

- Third Generation modules have Red-Green LEDs for all indicators.


PWR	SDS	ERR	AUX	Indication
OFF	OFF	OFF	OFF	OFF ( DC+ is less than 8 volts )
SG	SG	SG	SG	1st LED Test Pattern (Third Gen) (All Green segments ON )
SR	SR	SR	SR	2nd LED Test Pattern (Third Gen) (All Red segments ON )
* SR	SR	SR	OFF	* Waiting for DC+ to reach SDS minimum of 11V (User never sees if normal start-up)
* SR	SR	OFF	OFF	* Waiting for valid EEPROM access (User never sees if normal start-up)
SG	OFF	FG	OFF	Waiting to Autobaud (Third Gen) (Not seen if fixed rate is used.)
SG	OFF	SG	SG	NORMAL CONDITION - Nothing to transmit on the CAN bus
SG	IG	SG	SG	NORMAL CONDITION - Trying to transmit on the CAN bus
SG	OFF	FR	SG	Nothing to transmit on the CAN bus and minor diagnostic bit(s) set
SG	IG	FR	SG	Trying to transmit on the CAN bus and minor diagnostic bit(s) set
SG	OFF	SR	SG	Not transmitting on the CAN bus and MAJOR diagnostic bit(s) set
SG	IG	SR	SG	Trying to transmit on the CAN bus and MAJOR diagnostic bit(s) set
* SG	SFR	SR	SG	* BUS OFF Condition ( SDS LED solid or flashing red only <i>during</i> BUS OFF condition )

\* These patterns available on units manufactured after June 2015, as identified by Serial Number (2015182X or higher)

OFF = LED is OFF  
 SG = Solid Green  
 SR = Solid Red  
 FG = Flashing Green  
 FR = Flashing Red  
 SFR = Solid OR Flashing Red  
 IG = Intermittent Green  
 FR = Flashing Red  
 I/O = If AUX is Solid Green indicates that Power for I/O is Present

## Operation

The BusBlock Frequency Input module converts frequency signals using the process defined below.

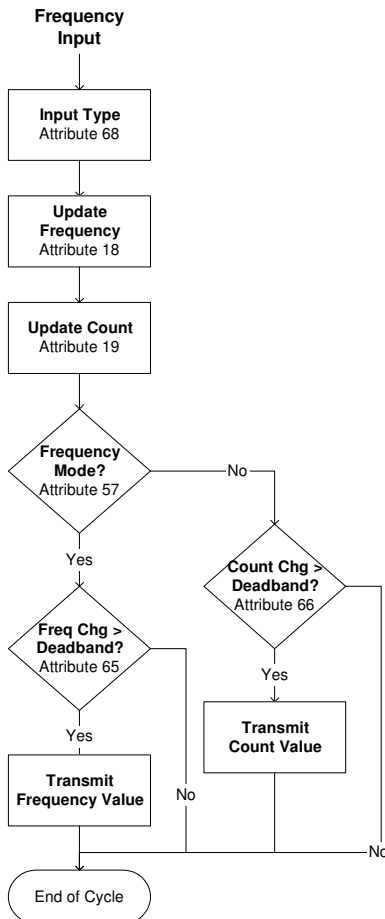

### Input Range

The BusBlock Frequency Input Module can be configured to accept pulses, quadrature inputs or magnetic inputs through the **Input Range (attribute 68)**. The counting function is determined by setting the appropriate value from the table below:

Value	Input A	Input B
0	Count Up	Disabled
1	Magnetic Pickup	Disabled
2	Count Up	Count Direction
3	Count Up	Count Down
4	Count Up	Count Up
5	Quadrature A	Quadrature B

### Data Mode

The BusBlock Frequency Input Module can be configured to transmit either a frequency value or an actual count. The frequency value (in Hertz) is enabled as the input variable by setting the **Data Mode (attribute 57)** to 1. Setting the Data Mode to 2 causes the module to transmit count data to the host controller. A value of 3 enables both frequency and count to be transmitted as input variables.

### Note

*When using a packaged control system, such as Think & Do Software, it is not necessary to explicitly read input and output variables. The SDS I/O Driver and Interface Card perform this function. All that is required is to map inputs and outputs as described in the software user manual.*

### Frequency Variable

**Attribute 18** functions as the frequency variable for the BusBlock Frequency Input Module. Whenever an event is generated that reports the frequency, the data in attribute 18 will be passed.

### Frequency Deadband

A **Frequency Deadband (attribute 65)** can also be set. This will limit events from being sent unless the input variable changes at least as much as the value entered in the Change of Value Deadband. This prevents insignificant changes in the input variable from generating events on the bus. The default value for the Frequency Deadband is 16.

### Count Variable

**Attribute 19** functions as the count variable for the BusBlock Frequency Input Module. Whenever an event is generated that reports the count, the data in attribute 19 will be passed.

### Count Deadband

A **Count Deadband (attribute 66)** can also be set. This will limit events from being sent unless the count variable changes at least as much as the value entered in the Count Deadband. This prevents insignificant changes in the count value from generating events on the bus. The default value for the Count Deadband is 256.

### Input Event Mode

Most systems will require a BusBlock I/O Module to generate an event whenever one or more inputs change state. This requires the **Unsolicited Mode (attribute 6)** be enabled by setting its value to 1, 2 or 3. A value of 1 enables changes in frequency to transmit an event, a value of 2 changes in count, and a value of 3 enables both variables to transmit change of value events. The default value for the Unsolicited Mode is 3.

Other options are to disable change of value events (Unsolicited Mode = 0) or use the **Cyclic Timer (Attribute 10)** by setting it to some non-zero value. The Cyclic Timer will transmit the input variable on an interval equal to the value in the Cyclic Timer attribute times 10 milliseconds (0.01 seconds).

## Diagnostics

The Diagnostics Register (**attribute 9**) is two bytes and contains the minimum diagnostics required for the Smart Distributed System, plus additional diagnostics specific to the BusBlock Frequency Input module.

### Diagnostic Register Bit Definitions Byte 0

Bit	Name	Description
0		Reserved
1		Reserved
2	BUSOFF	Bus off communications error
3		Reserved
4		Reserved
5		Reserved
6		Reserved
7	EPRM	EEPROM error detected

### Diagnostic Register Bit Definitions Byte 1

Bit	Name	Description
0	SRVLIFE	Service Life exceeded
1		Reserved
2		Reserved
3	SDSPWR	SDS Supply Voltage Out of Range (11-27V)
4	LOLIM	Low Limit
5	HILIM	High Limit
6	CANOVRRN	CAN Overrun
7		Reserved

SDS host controllers are equipped to receive a diagnostic event, then automatically obtain the information from the **Diagnostic Register (attribute 9)**. Consult the documentation for the host controller being used to determine how errors are handled.

### **BUSOFF**

The CAN controller on the BusBlock module counts error messages. Every error message increments a counter by 8, every good message decrements the counter by 1. If the counter reaches 128 then the module will go BUSOFF, and will need to be reset by the host controller.

### **EPRM**

The EPRM error will occur when the microprocessor on the BusBlock module is unable to read or write EEPROM.

### **SRVLIFE**

BusBlock modules are equipped with two attribute settings for managing the service life of the module. The first, **Service Time (attribute 63)** is the number of hours the module has been in operation. The second, **Service Life (attribute 64)** is set by the user, and is the number of service hours before the unit requires maintenance and/or replacement. When the Service Time value reaches the Service Life setting then an SRVLIFE diagnostic is transmitted.

### **SDSPWR**

This diagnostic is set when SDS bus voltage falls below the required level of 11 VDC.

### **LOLIM**

A LOLIM diagnostic is generated when the scaled input value is at or below the Low Limit set in attribute 69.

### **HILIM**

A HILIM diagnostic is generated when the scaled input value is at or above the High Limit set in attribute 71.

### **CANOVRRN**

The CAN Overrun error is generated when the buffer is overloaded. Check the SDS bus for bad devices or poor connections.

### **Attribute 54 – CAN Error Status Codes**

- 0 No error
- 1 Stuff error
- 2 Form error
- 3 Acknowledgement error
- 4 Bit recessive error
- 5 Bit dominant error
- 6 CRC error
- 7 reserved

**Attributes**

ID	Description	R/W	Data Type	Size	Count	Default
0	Network Data Descriptor	R	Unsigned	Byte	3	18,04h,40h
1	Baud Rate	R	Unsigned	Byte	1	0 [autobaud]
2	Object Model	R	Unsigned	Byte	5	1, 42, 5, 5, 2
3	Vendor Id	R	Unsigned	Word	1	9 [Holjeron]
4	Logical Address	R	Unsigned	Byte	4	125, 124, 123, 122
6	Un/solicited Mode	W	Boolean	Undef	2	3
7	Software Version	R	Character	Undef	12	
8	Diagnostic Counter	R	Unsigned	Byte	1	
9	Diagnostic Register	W	Unsigned	Byte	2	
10	Cyclic Timer	W	Unsigned	Word	1	0 [disabled]
11	Serial Number	R	Unsigned	Long	1	
12	Date Code	R	Character	Undef	4	
13	Catalog Listing	R	Character	Undef	32	BBK-FRQ204
14	Vendor	R	Character	Undef	32	Holjeron
15	Description	W	Character	Undef	32	4 Channel Frequency Input
18	Frequency Variable	R	Signed	Word	1	
19	Count Variable	R	Signed	Long	1	
54	CAN Error Status Code	R	Unsigned	Byte	1	
55	Manufacturing Codes	R	Unsigned	Byte	1	0
56	Tag Name	W	Character	Undef	32	
57	Data Mode	W	Boolean	Undef	2	1 [Frequency]
58	Number of Channels Used	W	Unsigned	Byte	1	4
59	Enable Object Mode	W	Boolean	Undef	1	0
63	Service Time	R	Unsigned	Word	1	
64	Service Life	W	Unsigned	Word	1	5000
65	Frequency Deadband	W	Unsigned	Word	1	16
66	Count Deadband	W	Unsigned	Word	1	256
68	Input Range	W	Unsigned	Byte	1	0

**Actions**

ID	Description	Request Data	Response Data
0	NOOP	---	---
1	Change Address	New logical address	
2	Self Test	---	---
6	Clear All Errors	---	---
8	Enroll Logical Device	---	Vendor Id, Serial Number
10	Change Baud Rate	New baud rate (0...4)	
51	Force State	Input Variable	
52	Unforce State	---	---
53	Read Attribute Descriptor	Attribute Id	Attribute Id, Attribute Descriptor
57	Password	Password	
60	Reset Factory Defaults	---	---

**Events**

ID	Description	Event Data
0	Diagnostic Event	Number of diagnostic bits set in Attribute 9
3	End of Timer	Attribute, Input Variable
6	Change of Value	Attribute, Input Variable

## Legacy LED Diagnostic Indicator Patterns

### Second Generation (Rev 2 – Rev 5)

- Second Generation modules have Red-Green LEDs for all indicators.

<b>PWR</b>	<b>SDS</b>	<b>ERR</b>	<b>Indication</b>
OFF	OFF	OFF	OFF ( DC+ is less than 8 volts )
SG	SG	SG	1st LED Test Pattern (Second Gen)
SG	SR	SR	2nd LED Test Pattern (Second Gen)
SG	OFF	FG	Waiting to Autobaud (Second Gen) (Not seen if fixed rate is used.)
SG	OFF	SG	NORMAL CONDITION - Nothing to transmit on the CAN bus
SG	IG	SG	NORMAL CONDITION - Trying to transmit on the CAN bus
SG	OFF	FR	Nothing to transmit on the CAN bus and minor diagnostic bit(s) set
SG	IG	FR	Trying to transmit on the CAN bus and minor diagnostic bit(s) set
SG	OFF	SR	Not transmitting on the CAN bus and MAJOR diagnostic bit(s) set
SG	IG	SR	Trying to transmit on the CAN bus and MAJOR diagnostic bit(s) set

OFF = LED is OFF  
 SG = Solid Green  
 SR = Solid Red  
 FG = Flashing Green  
 FR = Flashing Red  
 SFR = Solid OR Flashing Red  
 IG = Intermittent Green  
 FR = Flashing Red  
 I/O = If AUX is Solid Green indicates that Power for I/O is Present



## Legacy LED Diagnostic Indicator Patterns

### First Generation – (Rev 0 - Rev 1)

- First Generation modules have Green LEDs for PWR, SDS, and AUX and Red LED's for ERR indication.

<b>PWR</b>	<b>SDS</b>	<b>ERR</b>	<b>Indication</b>
OFF	OFF	OFF	OFF ( DC+ is less than 8 volts )
SG	OFF	OFF	NORMAL CONDITION - Not trying to transmit on the CAN bus
SG	IG	OFF	NORMAL CONDITION - Trying to transmit on the CAN bus
SG	IG	SR	Trying to transmit on the CAN bus and diagnostic bit(s) set
SG	OFF	SR	Not transmitting on the CAN bus and diagnostic bit(s) set
SG	SG	SR	BUS OFF fault condition
SG	OFF	FR	Nothing to transmit on the CAN bus and major diagnostic bit(s) set

OFF = LED is OFF

SG = Solid Green

SR = Solid Red

FG = Flashing Green

FR = Flashing Red

IG = Intermittent Green

FR = Flashing Red

I/O = If AUX is Solid Green indicates that Power for I/O is Present